


## EMBRAGUE NEUMÁTICO DE DIENTES NEGATIVO

# DPR-N

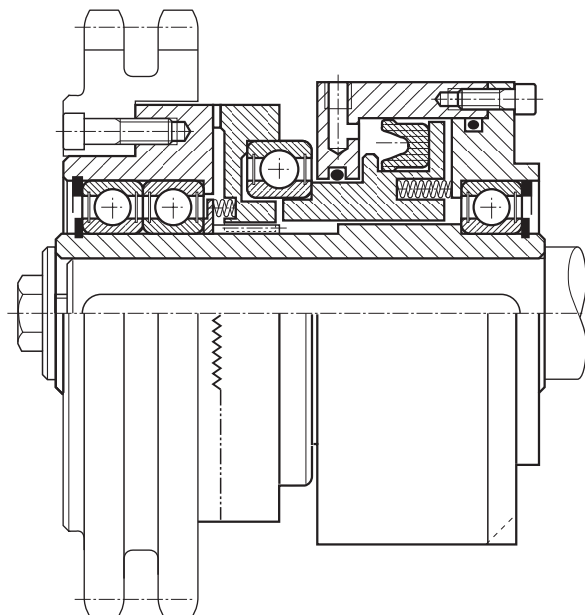

### EMBRAGUE NEUMÁTICO DE DIENTES DIRECTO

Estos acoplamientos se enganchan por la acción de resortes de empuje, que garantizan el par nominal.

Contrariamente a los liberados por resorte, en condiciones de trabajo estos acoplamientos se enganchan por la acción de resortes de empuje, que garantizan el par nominal.

La desconexión ocurre cuando se suministra aire a presión al cilindro de trabajo a través del orificio de suministro «A» ubicado en el diámetro externo del cilindro de trabajo mismo.


Para obtener una desconexión completa del acoplamiento, debe garantizar la presión de liberación sugerida en este catálogo;

También sugerimos montar la válvula de comando, que debe estar equipada con un dispositivo de descarga, lo más cerca posible del cilindro de trabajo, para enganchar la transmisión de forma rápida y precisa.

### MONTAJE Y AJUSTE DE LA GALGA

Al montar, siga nuestras instrucciones y ejemplos. El cilindro de trabajo debe estar anclado, pero no bloqueado, por medio de una abrazadera o pasador enganchado en una de las tres marcas fresadas de 120° en el cilindro de trabajo mismo; este soporte debe engancharse al punto fresado más conveniente, en relación con el orificio de suministro de aire, asegurándose de que el cilindro de trabajo tenga algo de juego radial y axial. Durante la fase de ensamblaje, es muy importante verificar el entrehierro (Q) en 3 puntos a 120° con un medidor de espesor; debe ser como se especifica en las tablas.

- Montar el acoplamiento de dientes.
- El diente tiene que estar comprometido.
- Desembrague el acoplamiento alimentando con aire al cilindro.
- Compruebe la galga.

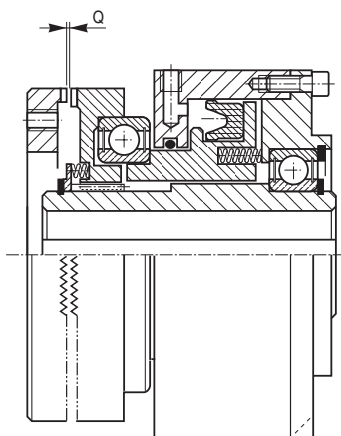

### PNEUMATIC SPRING APPLIED TOOTH-TYPE COUPLINGS WITH STATIC CYLINDER

Contrary to the spring released ones, in working conditions these couplings are engaged by the action of thrust springs, which guarantee the nominal torque.

The disengagement occurs when air under pressure is supplied to the working cylinder through the supply bore «A» located on the external diameter of the working cylinder itself.

In order to obtain a complete disengagement of the coupling, you must guarantee the release pressure suggested on this catalogue; we also suggest to mount the command valve, which must be equipped with a blow-off device, as close as possible to the working cylinder, to quickly and precisely engage the transmission.

### MOUNTING AND AIR GAP ADJUSTMENT

When mounting, please follow our instructions and examples. The working cylinder must be anchored, but not blocked, by means of a bracket or pin engaged on one of the three 120° milled spots on the working cylinder itself; this bracket is to be hooked onto the most convenient milled spot, in relation to the air supply bore, making sure that the working cylinder has some radial and axial play.


During the assembly phase, it is very important to check the air gap (Q) at 3 points at 120° with a thickness gauge; it should be as specified in the relevant tables.

- Mount the tooth-type coupling.
- The toothing has to be engaged.
- Disengage the coupling feeding air to the cylinder.
- Check the air gap.

DP-N		
Grandeza Size	Traferro «Q» Air Gap mm	
00	0,20	0,30
01	0,25	0,35
02	0,30	0,45
03	0,30	0,45
04	0,35	0,50
05	0,35	0,50
06	0,40	0,60
07	0,50	0,70



The teeth can have any one of a number of designs.

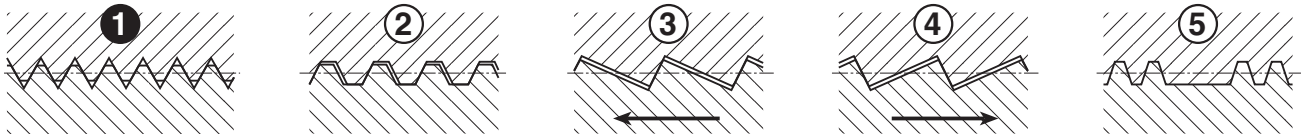



**Triangular teeth without play ① (standard)**

This type has no lateral play and only permits engagement when there is no movement or when the velocities are synchronous.


**Trapezoidal teeth with lateral play ②**

This type permits engagement when the velocities are synchronous, or at a very low R.P.M.

**On request**, the following features are available: dragging in only one direction (clockwise or counterclockwise), saw-toothed design ③ ④; one or more fixed points of reference, special tooth design ⑤.

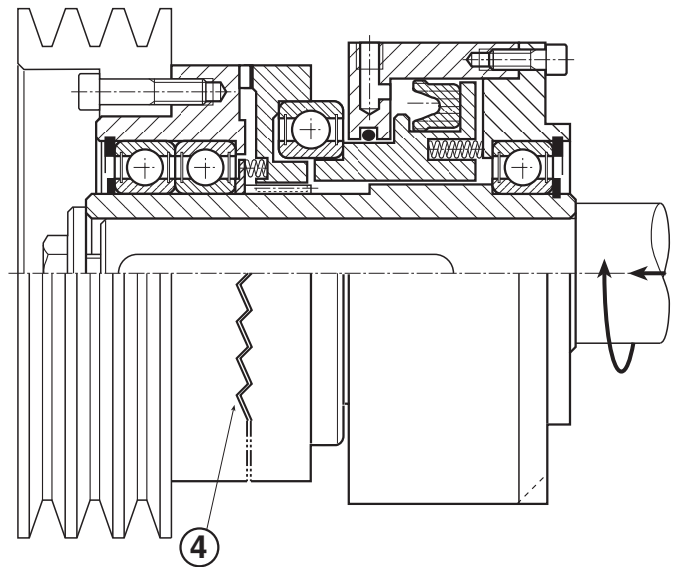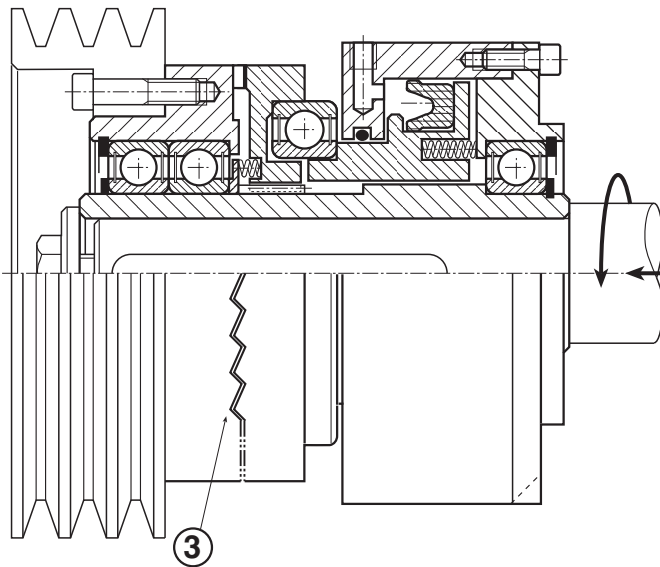


## DPR-N

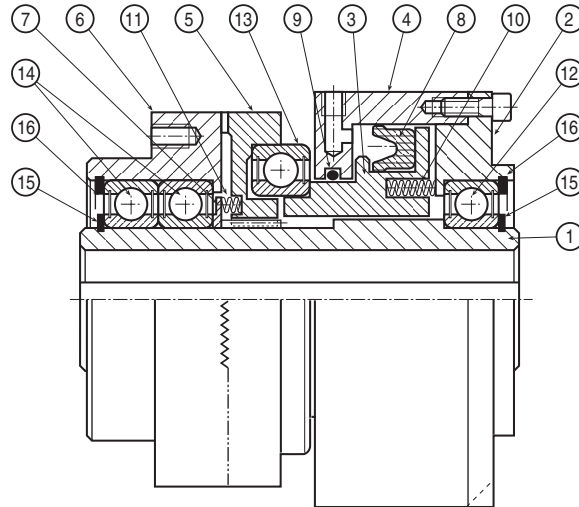

### PARTS LIST

1. CENTRAL HUB
2. COVER FLANGE
3. PISTON
4. CYLINDER
5. TOOTHED RING
6. TRANSMISSION HUB
7. SPRING COMPRESSION RING
8. SEAL RING
9. O-RING
10. SPRING
11. RELEASE SPRING
12. HUB BEARING
13. PISTON BEARING
14. SLEEVE BEARING
15. OUTER SAFETY RING
16. INNER SAFETY RING
17. FLEXIBLE COUPLING FLANGE
18. FLEXIBLE COUPLING

### EXAMPLES OF MOUNTING

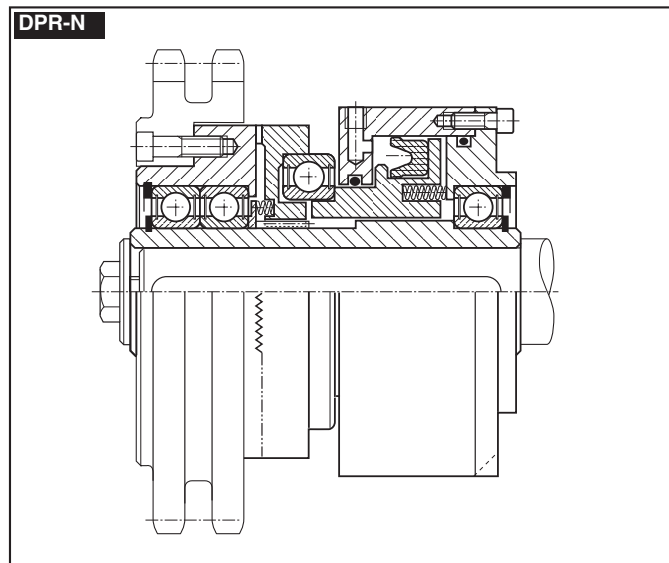


**TOOTH-TYPE PNEUMATIC COUPLING SPRING LOADED WITH TRANSMISSION HUB**

DPR-N..

**03**

<b>MODEL</b>	DPR-N □□
<b>CODE</b>	03.60.□□.01

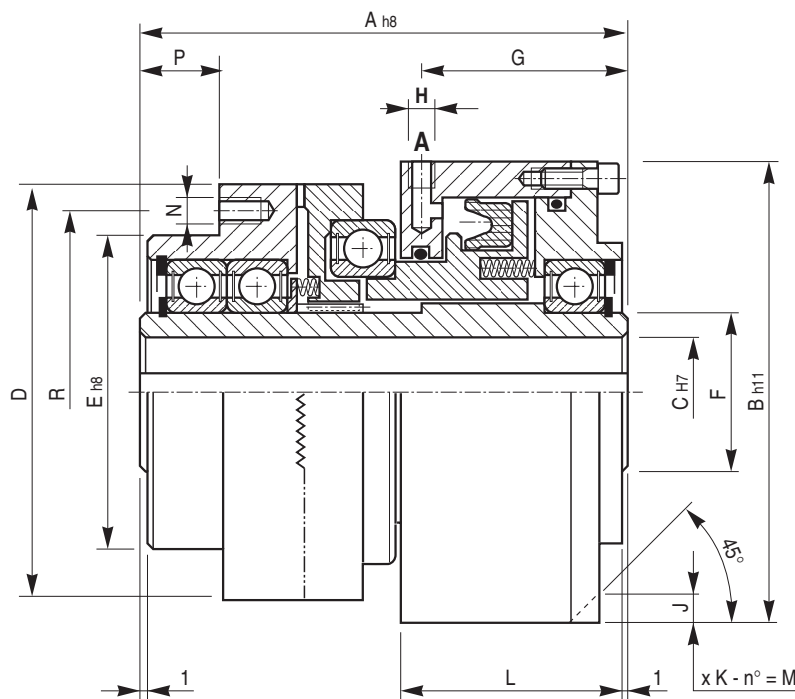

A = Air supply

□□	Torque Ms(Nm)	R.P.M. max	Release pressure (bar)	Cylinder volume (cm³)	Weight (kg)
00	110	3000	6	8	4,3
01	160	3000	6	12	5,2
02	260	2400	6	17	7,1
03	350	2400	6	18	8,4
04	550	2000	6	38	11,5
05	750	2000	6	45	13,5
06	1300	1600	6	63	19,7
07	2100	1400	6	73	28

□□	A	B	C		D	E	F	G	H	J x K	L	M	N	P	R
			min	max											
00	114	108	14	20	92	65	30	48	1/8"	6 x 6	54	3	3 x M6	18	82
01	120	123	15	25	99	72	35	51	1/8"	8 x 8	57	3	3 x M6	19	88
02	128	138	18	34	115	88	45	55	1/8"	8 x 8	61	3	3 x M6	20	102
03	135	145	18	34	124	88	45	58	1/8"	8 x 8	64	3	3 x M6	20	108
04	150	178	20	46	137	102	60	63	1/8"	9 x 9	70	3	6 x M6	23	120
05	160	198	25	50	153	112	65	70	1/4"	10 x 10	78	3	6 x M8	22	135
06	172	228	30	60	178	132	75	74	1/4"	10 x 10	82	4	6 x M8	23	155
07	185	248	30	68	209	145	85	78	1/4"	10 x 10	86	4	6 x M10	32	180